

LumiSplash Slim Frame Installation Instruction

NOTE: For larger size panels, add an additional Z-clip per 24 inches and one T-screw for each additional z-clip to properly secure the panel. For example, an 8 ft. vertically installed panel would be mounted using four Z-clips and four T-screws.

Figure 1- The Wall

- 1) For best results, always try to install into one or more wall studs. When no stud is available, ALWAYS use provided white wall anchors.
- 2) On the wall, at the desired height, install the metal Z-clip with the provided 1" screws.
- 3) Hang the panel by interlocking the Z-clip onto the frame as shown in figure 3 (below). If needed, you can adjust the level of the frame by using the elongated holes on the Z-clip.

Figure 2 - Anchor Installation and Alignment

- 1) Once level, using a pencil, lightly trace the bottom edge of the bracket on the wall.
- 2) Gently remove frame from wall. Using the center of the pencil line, measure up 5/16th of an inch and mark the wall. This should correspond to the **center** opening of the bracket, where it will rest on the wall.
- 3) At the mark from above, install the blue anchor and T-screw. Leave the T-Screw head approximately 3/8th of an inch off the wall in a horizontal position.
- 4) Place the frame back on wall ensuring that the T-Screw fit into the bracket ; adjust depth if needed. Using the supplied wrench, insert the wrench behind the frame and turn the T-Screw 90 degrees. The frame should now be locked onto the wall.

fig. 1


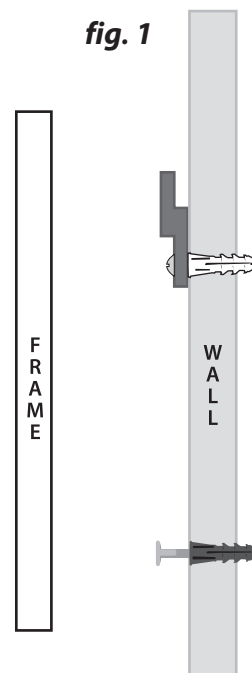


fig. 2

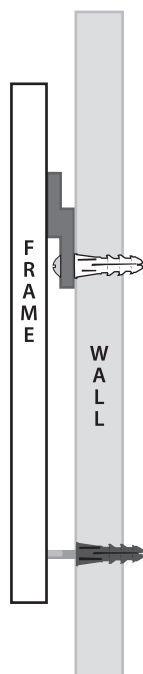

*The top cleat and bottom screw will lock into the frame.

Security Wrench