

LumiSplash Slim Frame Installation Instructions

WARNING: Carefully remove packaging and plug in the lights to ensure they all light up and have not been damaged in transit. If lights do not fully light up, contact ATI prior to installation.

NOTE: For larger size panels, add an additional Z-clip per 24 inches and one T-screw for each additional z-clip to properly secure the panel. For example, an 8 ft. vertically installed panel would be mounted using four Z-clips and four T-screws.

Figure 1 - The Wall

- 1) For best results, always try to install into one or more wall studs. When no stud is available, ALWAYS use provided white wall anchors.
- 2) On the wall, at the desired height, install the metal Z-clip.
- 3) Hang the panel by interlocking the Z-clip onto the frame as shown below. If needed, you can adjust the level of the frame by using the elongated holes on the Z-clip.

Figure 2 - Anchor Installation and Alignment

- 1) Once level, using a pencil, lightly trace the bottom edge of the bracket on the wall.
- 2) Gently remove frame from wall. Using the center of the pencil line, measure up 5/16th of an inch and mark the wall. This should correspond to the **center** opening of the bracket, where it will rest on the wall.
- 3) At the mark from above, install the blue anchor and T-screw. Leave the T-Screw head approximately 3/8th of an inch off the wall in a horizontal position.
- 4) Place the frame back on wall ensuring that the T-Screw fit into the bracket; adjust depth if needed. Using the supplied wrench, insert the wrench behind the frame and turn the T-Screw 90 degrees. The frame should now be locked onto the wall.

fig. 1

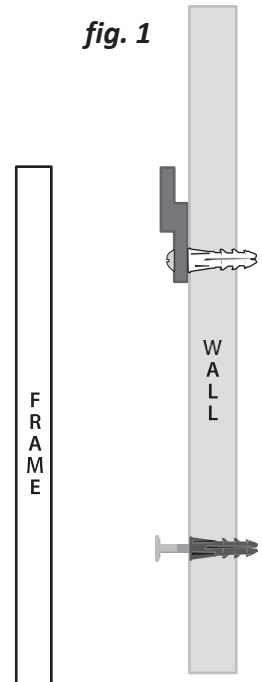


fig. 2

